


User guide for Maxbreeze Remote Control

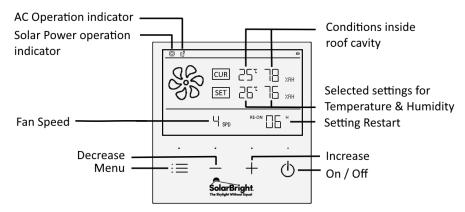

Click on menu button to check the selected settings and to switch between the functions

- Click on increase /decrease buttons to adjust the setting values
- Click Off/On button to start or stop the motor
- To change the temperature unit between °C and °F
 - For black remotes: Press and hold the On/Off button for 10 seconds while in temperature mode.
 - For white remotes: Press the Menu and On/Off buttons together for 10 seconds.
- Please note the size of the LED screen may differ between models, functionality remains the same

Understanding Symbols

255 250	Rotating Blade = Motor is running Static Blade = Motor is ON but not running Flashing Blade = Motor is Off or not paired to the remote NO Blade = Motor is Off					
52.	Select the desired temperature inside the roof cavity – Ideal temperature is 25°C	70 %RH	Select the desired humidity level inside the roof cavity – Ideal level is 90%			
∐ SPD	Select desired fan speed (options of 1, 2, 3, 4 and Auto), ideal level is Auto. In Auto mode, the fan speed adjusts automatically based on the roof conditions. It will stop once the temperature drops to <25°C and humidity < 50%. When in Auto mode speed is not displayed.		Setting restart (countdown) timer, example: If the motor is turned off manually, it will turn on automatically after 6 hours on after any other number of hours selected			

Pairing brand-new remote to the motor

1-	Turn the power o	off (if connected	to main power	r) and cove	r the solar pa	inel, ensure all	source
	of power are fully	y disconnected.	Wait for 10 sec	conds			

2-	Uncover the solar panel to reconnect power then immediately click on 2 buttons decrease $\&$
	power simultaneously for 5 seconds.
	power Simultaneously for 5 seconds.
	Lights 2 & 4 will flash indicating the pairing is completed, the blade will start rotating
	(providing ambient conditions meet the selected settings)

